


# POWERWING ASSEMBLY: "T" UNIT



Slatwall shown is optional

**1.** Complete Steps 1-2 of the Basic "T" Unit Assembly Instructions.


**2.** Next, insert the top of the Powerwing into the hole in the top of the upright.

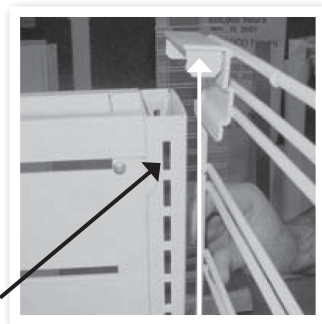

**Upright**

**Top of Powerwing**

Before inserting completely, ensure the clip at the bottom of the Powerwing is resting (as shown) correctly on the bottom of the upright.

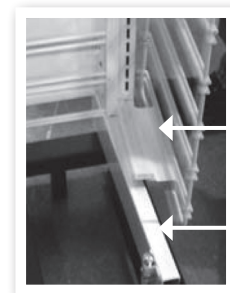

**Clip**

**Upright**

**3.** Finish assembling unit following the Basic "T" Unit Instructions. Omit the end of Step 4, which refers to attaching a Plug (L) to the unit.



Your completed unit with Powerwing looks like this.